



Nerf N-Strike Elite Retaliator Air Chamber Assembly Replacement

Replace the air chamber assembly of your Nerf N-Strike Elite Retaliator.

Written By: ericharman



INTRODUCTION

A worn plunging mechanism can limit your effective firing range. Nobody has time for that. Use this guide to disassemble the blaster and replace the plunger and air chamber.

Step 1 — Case Disassembly



- While holding the blaster, rotate the barrel assembly in the counter-clockwise direction and pull away from the blaster.

Step 2



- Remove the stock of the blaster by pushing the orange tabs downward while pulling the stock away from the blaster.

Step 3



- Remove the ammunition clip from the blaster by forcing the sliding mechanism backwards, pushing the orange tabs downward, and pulling the ammunition clip away.

Step 4



- Remove the air intake restrictor by removing the 2 – 8mm phillips-head screws.

Step 5



- Remove the 11 – 8mm and 2 - 10mm phillips-head screws from the left side of the blaster and carefully remove the outer casing.
- ⓘ Two of the screws must be removed with sliding mechanism in the forward position. Another two must be removed with the sliding mechanism in the back position.
- ⚠ There are several springs that may become displaced during this procedure. Proceed with the utmost caution.

Step 6 — Air Chamber



- ⚠ The firing spring may be energized. If so, carefully release and spring pressure before proceeding.
- While holding down the white air chamber, pull the firing spring backwards to remove it from the blaster.

Step 7



- Slide the white air chamber forward and remove the white alignment bracket.

Step 8



- Remove white air chamber by depressing the orange trigger apparatus and pulling backwards off of the barrel.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 07:29:37 PM.